

Carnival SilverScreen

termination guidelines

THE
CHORD[™]
COMPANY

MOVING SOUND & VISION[™]



1. Cut cable to correct length.
NB - The signal direction flows with the text.



2. Using a sharp blade, gently cut around the outer jacket, approx 12cm (5 inches) from the cut end.



Pull off and discard the section of outer jacket.
Unwind and tear off the foil from the cut end.



3. Using a sharp blade again, carefully cut around the white PVC jacket flush, taking care not to cut into the red and black insulation.

Pull off PVC jacket, revealing the red and black inner cables



4. Fit heatshrink sleeve as shown. A special, low temperature heatshrink sleeve is available from your cable supplier. This can be shrunk into place using a domestic hair-dryer.

5. Remove approx 4mm of insulation from the end of each conductor.



6. Fit screw or solder-type speaker connector or fit cable directly to speaker binding posts. Ensure good contact for maximum conductivity.



Please note:

These instructions are intended as a guide only. If you are in any doubt, please contact us

For info, advice and recommendations for your specific system see the cable doctor at www.chord.co.uk

The Chord Company Ltd, Chord Company House, Millsway Centre, Amesbury, Salisbury SP4 7RX, UK
Tel: +44 (0)1980 625700 Fax: +44 (0)1980 625070 Email: info@chord.co.uk Web: <http://www.chord.co.uk>