


# Epic termination guidelines

## Epic Twin




1. Cut around outer jacket, approx 150mm (6 inch) from the end of the cable



2. Snip braid and foil, carefully cut around the white silicon inner jacket and then pull off the cut pieces, exposing the Teflon insulated conductors



3. Heatshrink over the "neck".

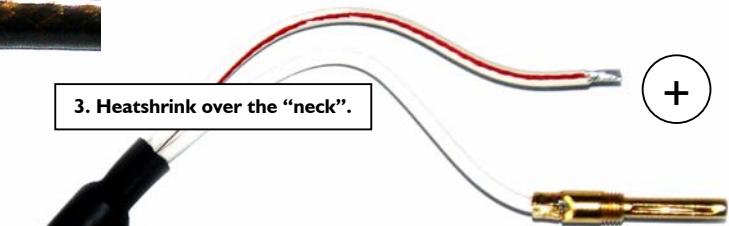

4. Strip back approx 6mm (1/4 inch) of the Teflon insulator, exposing the conductors


5. Fit plug of choice and heatshrink over the joint




## Epic Super Twin



1. Cut, strip and prepare as per Epic Twin

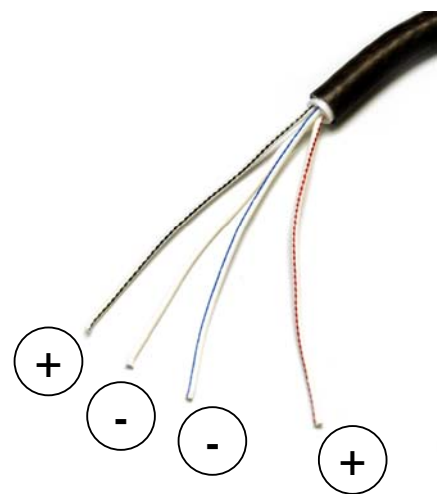

3. Fit connector of choice and add heatshrink over the joint. See above

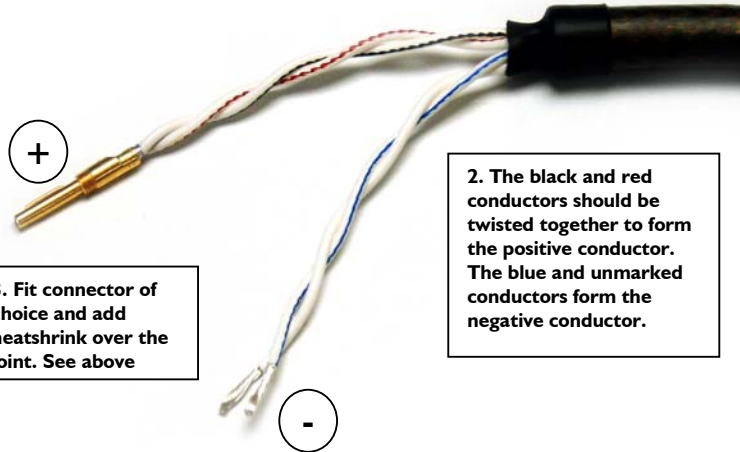

2. The black and red conductors should be twisted together to form the positive conductor. The blue and unmarked conductors form the negative conductor.

Please note that the signal should run in the same direction as the printed text on the cable outer jacket

*Please note:  
These instructions are intended as a guide only. If you are in any doubt, please contact us. For info, advice and recommendations for your specific system see the cable doctor at [www.chord.co.uk](http://www.chord.co.uk)*